


GP-0522 7" ANGLE GRINDER

www.air-allied.com.au

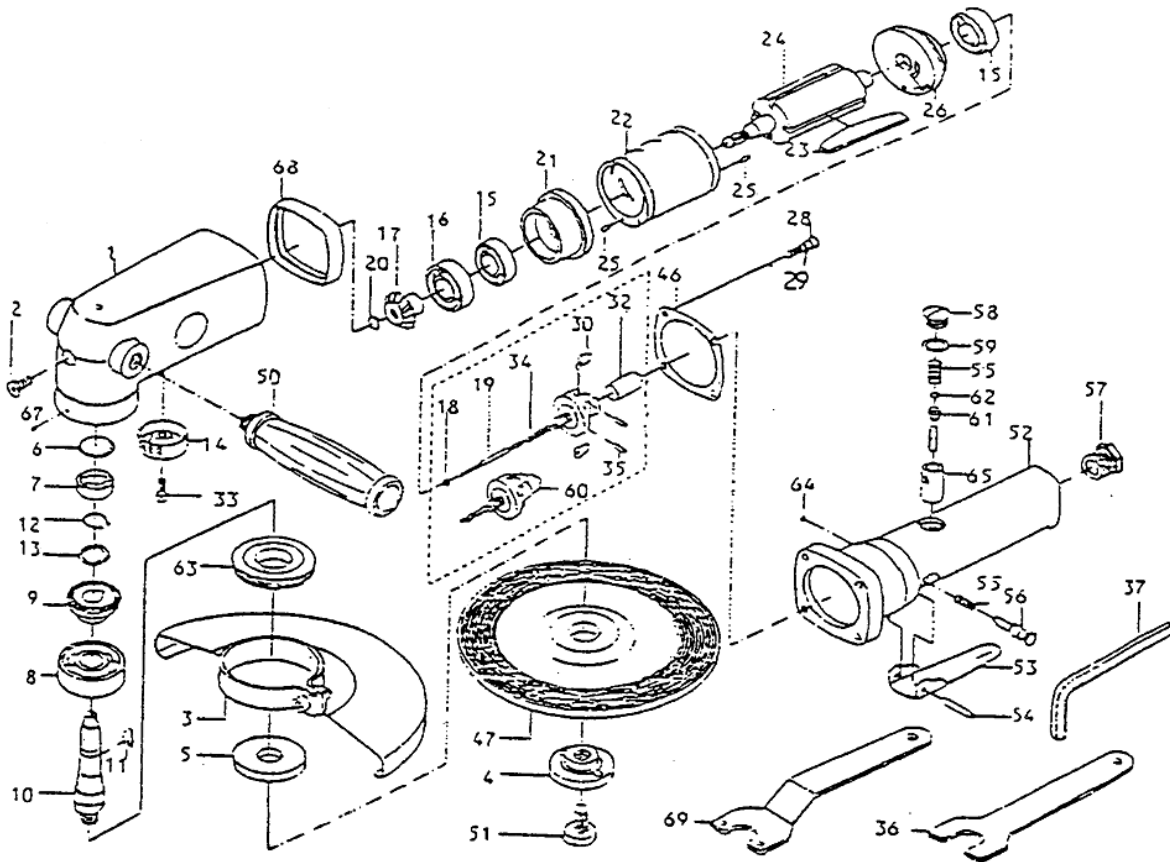

PARTS DESCRIPTION

<u>NO.</u>	<u>DESCRIPTION</u>
01.	BODY
02.	SCREW
03.	DISC COVER
04.	DISC NUT
05.	DISC RECEIVER
06.	SPACER
07.	BALL BEARING
08.	BALL BEARING
09.	BEVEL GEAR
10.	GEAR SHAFT
11.	KEY
12.	RETAINING RING
13.	SPRING WASHER
14.	EXHAUST DEFLECTOR
15.	BALL BEARING (2)
16.	BALL BEARING
17.	BEVEL PINION
18.	ADJUST NUT
19.	ADJUST SCREW
20.	RETAINING RING
21.	FRONT PLATE
22.	CYLINDER
23.	ROTOR BLADE (4)
24.	ROTOR
25.	SPRING PIN (2)
26.	REAR PLATE
28.	CAP SCREW (4)
29.	WASHER

PARTS DESCRIPTION

<u>NO.</u>	<u>DESCRIPTION</u>
30.	PENDULUM (8)
32.	PLUNGER
33.	SCREW
34.	SPRING
35.	SPRING PIN (2)
36.	STOP SPANNER
37.	ALLEN WRENCH
46.	GASKET
47.	DISC WHEEL
50.	DEAD HANDLE
51.	DISC STOP SCREW
52.	GOVERNOR CASE
53.	LEVER
54.	SPRING PIN (2)
55.	VALVE SPRING (2)
56.	SAFE LEVER
57.	HOSE ADAPTER
58.	VALVE SCREW
59.	"O" RING
60.	GOVERNOR ASSEMBLY
61.	VALVE PIN
62.	"O" RING
63.	NUT
64.	RETAINING RING
65.	VALVE BUSHING
67.	SCREW
68.	RUBBER
69.	DISC SPANNER